

#### **INSTALLATION INSTRUCTIONS FOR PART 99-7344**

#### **APPLICATIONS**

# Kia Sportage 2011-up 99-7344G 99-7344CH


#### KIT FEATURES

- ISO DIN head unit provision with pocket
- Painted Gray or Charcoal to match factory finish
  G=Gray, CH=Charcoal



#### KIT COMPONENTS

- A) Radio Housing Trim Panel B) DDIN Radio Housing Brackets C) Pocket D) (4) Panel Clips
- E) (4) Phillips Truss Head Screws

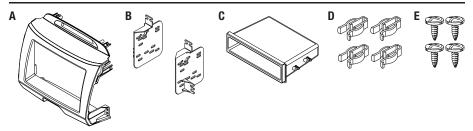

### WIRING & ANTENNA CONNECTIONS (Sold Separately)

Wiring Harness:

• 70-7304 Hyundai Kia harness 2010-up

Antenna Adapter:


Not Required

#### **TOOLS REQUIRED**

Panel Removal Tool • Phillips Screwdriver



METRA. THE WORLD'S BEST KITS.™







### **Table of Contents**

Dash Disassembly	
– Kia Sportage 2011-up3	-4
Kit Preparation	
– Kia Sportage 2011-up	. 5
Kit Assembly	
- ISO DIN head unit provision	. 6

### Caution

Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

\*NOTE: Refer also to the instructions included with the aftermarket radio.






Metra recommends MECP certified technicians




### **Dash Disassembly**

- Remove the screw in the instrument panel to the right of the "engine start" button then unclip the top panel of the steering column then unclip and remove the instrument panel. (Figure A)
- 2. Remove the screw in the dash panel above the glove box to the right of the radio then unclip and remove the dash panel. (Figure B)
- 3. Remove the two screws from the from the radio panel, unclip and remove. (Figure C)


Continued on next page

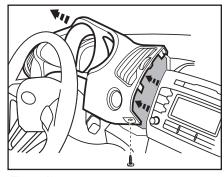

(Figure A)

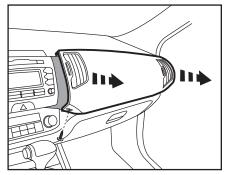

(Figure B)

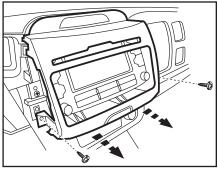


(Figure C)




## Dash Disassembly

- **4.** Unscrew the 4 Phillips screws securing the radio into the dash, unplug and remove the radio. (Figure D)
- **5.** Remove the four screws securing the display into the factory panel and unclip the hazard button. Both items will need to be installed into the 95-7344 kit panel. (Figure E)

Continue to kit preparation

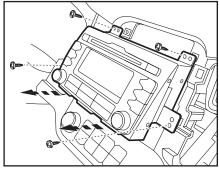

(Figure D)

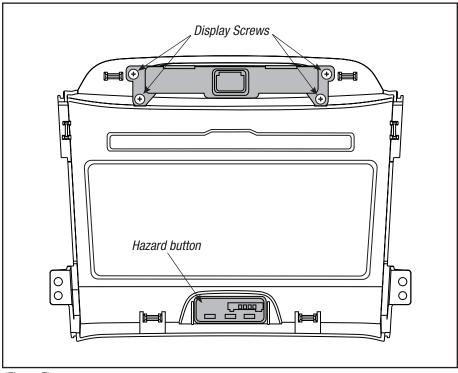


(Figure E)



## **Kit Preparation**

- 1. Install the hazard button and display previously removed from the factory radio panel. (Figure A)
- Attach the four included panel clips to the radio panel. (Figure A)
   Continue to kit assembly

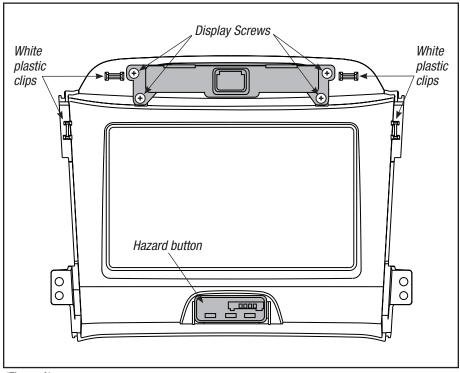


(Figure A)




### Kit Assembly 99-7344

## **ISO DIN head unit provisions**


- Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
- 2. Mount the pocket to the DDIN brackets using the supplied (4) screws.
- Mount the radio to the DDIN brackets/ pocket assembly with the screws supplied with the unit.
- **4.** Mount the radio/bracket assembly into the dash.
- **5.** Snap the radio trim plate over the radio/ pocket assembly and reassemble dash in reverse order of disassembly.

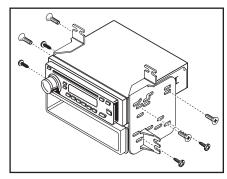

(Figure A)

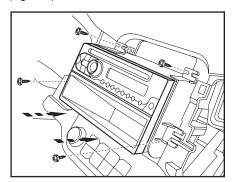

(Figure B)

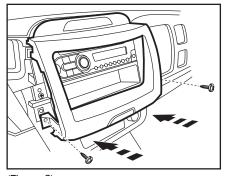

(Figure C)



## Notes



### **INSTALLATION INSTRUCTIONS FOR PART 99-7344**